

## Operation and Maintenance Instructions

# for CS Motor-driven grease pump

#### NANJING BIJUR MACHINERY PRODUCTS, LTD.

Tel: 86-25-85801188 Toll Free: 800-8286000 Fax: 86-25-85802288 Website: <a href="http://www.bijur.com.cn">http://www.bijur.com.cn</a> E-mail: china@bijur.com.cn

Bijur Lubricating Corporation web: www.bijur.com.cn
Part No.: 30627e REV: 3 Change notes:ECN-070741 mail: china@bijur.com.cn





Before installing or operating this product, please read this manual carefully. Failure to follow instructions can result in damage to the product and/or serious bodily injury.



Before performing service to product, always turn off and disconnect electrical power.



When connecting product, make sure that unit is securely and adequately grounded. Failure to ground properly may cause serious injury.

Bijur Lubricating Corporation Part No.: 30627e

1



#### **Table of Contents**

1. General ————————————————————————————————————	page 3
2. Technical Data	page 3
3. Pump NO. &Specification —	page 4
4. Dimension —	page 5
5. Principle ————————————————————————————————————	page 7
6. Notice	page 7
7. Troubleshooting —————	page 8

**Attachment: Product Quality Feedback Sheet** 



#### General

CS grease pump is driven by a DC or AC motor, It is ideal for PDI lubricant system.

There is a built-in controller which monitor the pump to deliver rated amount of lubricant to lubrication point in right time.

There are two models, the small capacity CS grease pumps and the large capacity CS grease pumps, which have 1~3 outlet. Each pump outlet has an over pressure protection valve and each outlet can support a lubrication system independently.

Reservoir capacity of the large capacity CS grease pumps is 2~8L. There are two kinds of reservoirs, the metal reservoir and the plastic reservoir. Low level switch is stationed when needed by the system. Besides, the metal reservoir stations high level switch.

#### 2, TECHANICAL DATA

1, DELIVERY VOLUME OF EACH OUTLET: DC GREASE PUMP: 5.5ml/min

AC GREASE PUMP: 3 m1/min

2, MAX WORKING PRESSURE: 25Mpa

3, GREASE: NLGI000#-2#

4, OUTLET THREAD SPEC:

 $M12 \times 1.5$ , NPTF1/4 and Rp1/4 are also available.

5, MOTOR: DC MOTOR 12VDC: 70W

24VDC: 50W

Change notes: ECN-070741

AC MOTOR 60W

3

6, LEVEL SWITCH: <u>220V</u> 1A




#### 3, Pump NO. &SPECIFICATIONS

PUMP NO.	TYPE	MOTOR	RESERVOIR	MODEL	LEVEL
FUMP NO.	TIFE	VOLTAGE		MODEL	SWITH
22438-X	CS160	12VDC			
22449-X	CS260	24VDC	2L		
25285-X	CS360	220VAC	PLASTIC	SMALL	NO
25290-X	CS460	380VAC	RESERVOIR		
28286-X	CS560	110VAC			
25212-XXX	CS160	12VDC			
25217-XXX	CS260	24VDC	<b>A</b> G		A G
25218-XXX	CS360	220VAC	AS	LARGE	AS
25219-XXX	CS460	380VAC	FOLLOWS		FOLLOWS
25220-XXX	CS560	110VAC			


#### INSTRUCTION of CODE NAME:

#### 1, SMALL MODEL

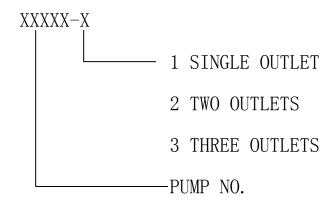




#### 2, LARGE MODEL

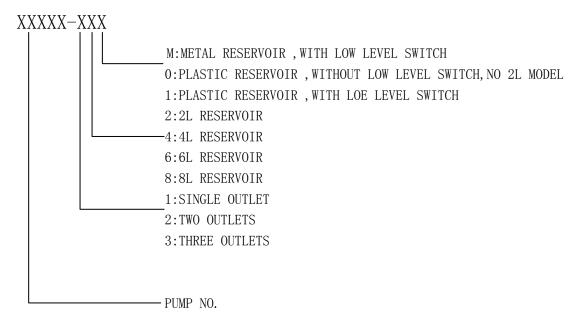


INDICATIONS: If a letter "k" is behind of code name, it just indicates that the CS grease pump is for Korea.

#### 4, DIMENSIONS


#### 1, SMALL DC MOTOR GREASE PUMP

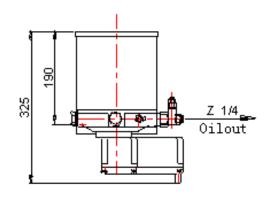

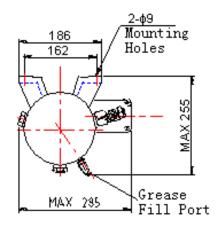


#### 2, SMALL AC MOTOR GREASE PUMP



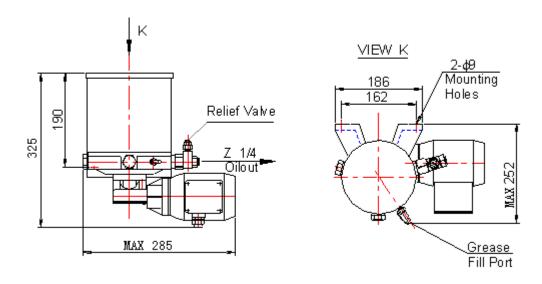



#### 3, LARGE DC MOTOR GREASE PUMP

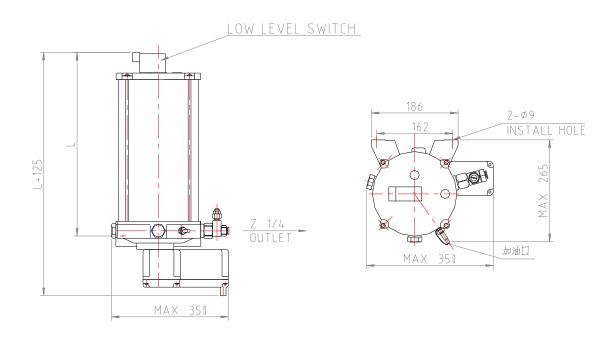

#### 4, LARGE AC MOTOR GREASE PUMP



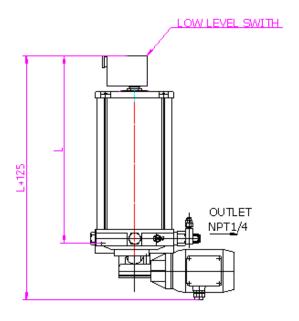

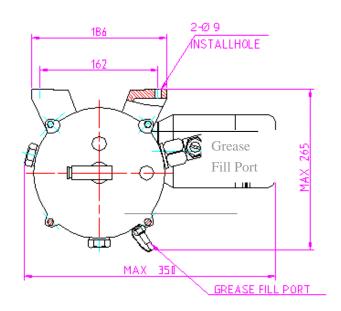

### 5, PRINCIPLE

The grease pump is driven by a DC or AC motor. And it drives a worm and worm wheel then rotation is transferred to a eccentric wheel which drives the piston to move back and forth, the lubricant is sucked into the pump body and then discharge at the outlet.

#### 6, NOTICE

- 1. The motor must be securely and adequately grounded.
- 2. The power voltage must be correct. The motor's rotating direction must be same as the label.



- 3, The grease used must be clean.
- Filling the grease from the designate part.
- Please check the safety valve in the order time.

#### 7. **TROUBLESHOOTING**

Symptom	Possible cause Remedy		
	1. Motor can't rotate Check power and motor		
No discharge at outlet	2. Motor rotate reversely	Connect the wires according	
		to the wiring diagram	
	3. Air at the bottom of	Exhaust air	
	reservoir		
Pressure can't build	1. Leakage at junctions	Check the pipeline	
	2. Pump body broken	Contact Nanjing Bijur	

Change notes: ECN-070741